



Bulldog Vaults



Standard Digital Vaults BD1060 & BD1070



Opening the Safe (first time)

Remove the override key cover located on the right side of the keypad. Insert the override key and turn to the right or clockwise, then rotate the main knob to the right to open the door. Please note that when locked the Main Opening Knob will be at approximately the 11 o'clock position. When the safe is unlocked the Main Opening Knob will be at approximately the 3 o'clock position.

Installing the Batteries

Remove the override key cover located on the right side of the keypad. Insert the override key and turn to the right or clockwise, then rotate the main knob to the right to open the door. With door open, install the 4 AA batteries. (Batteries not included.)

Opening the Safe Using the Factory Code **(FACTORY CODE IS SET TO 1 - 2 - 3 - 4)**

With the batteries installed make sure that the main knob is turned all the way to the left. If the main knob is turned to the right it may cause the safe not to open. Input the FACTORY CODE of 1 - 2 - 3 - 4 and press the “#” key. Immediately rotate the main knob all the way to the right and open the door. You will only have 5 seconds to rotate the main knob after pressing the “#” key.

Changing the Code

Open the safe door and locate the “Programming button cover”. Remove the cover by gently pulling it away from the panel. Once the cover is removed, press and release the red programming button. (The cover and programming button are located on the inside of the safe on the hinge side of the door as shown in the expanded diagram view.) The yellow input light on the main keypad will illuminate. Input your new code (must be 4 digits), then press the pound ‘#’ key. The yellow input light will turn off, confirming your new code has been accepted. Your new opening code will be your new 4 digit personal code followed by the pound ‘#’ key. If the yellow input light flashes 3 times, the procedure was done incorrectly and your new personal code was not accepted. Please try the above steps again. Once your new personal code has been accepted, place the “Programming button cover” back into the hole to prevent the programming button from being pressed accidentally. Remember to never store your emergency override key inside of the vault at any time, especially while setting your personal code.

Low Battery

When the batteries are low, the red and green lights will flash simultaneously, thus indicating it is time to change the batteries. To insure that the batteries are installed correctly, reset and test your code several times with the door open.

NOTE: DO NOT STORE THE OVERRIDE KEY INSIDE THE SAFE.

WARNING: FOR PROPER SECURITY, THIS VAULT MUST BE MOUNTED TO AN IMMOVABLE OBJECT USING THE INCLUDED MOUNTING HARDWARE.

Warranty: Bulldog Vaults are protected by a full one year guarantee that entitles the owner to free repair or replacement of the vault if the product failure was caused by a defective part or faulty workmanship. This guarantee lasts for one year from the date of purchase. The repair or replacement will require the original purchase receipt. Any vault returned to Bulldog Vaults must be returned using a Return Authorization number and shipped at the owner's expense. This RA number may be obtained by calling the service department at 800.843.3483. Any items returned to Bulldog Vaults without the said RA number may be refused and returned to the sender at their expense. Once the vault is received it will be evaluated, if the vault is deemed to be defective it will be repaired or replaced at the discretion of Bulldog Vaults.